


# L&P Adjustable Base app instructions

■ 200-0036



*Leggett & Platt*  
CONSUMER PRODUCTS

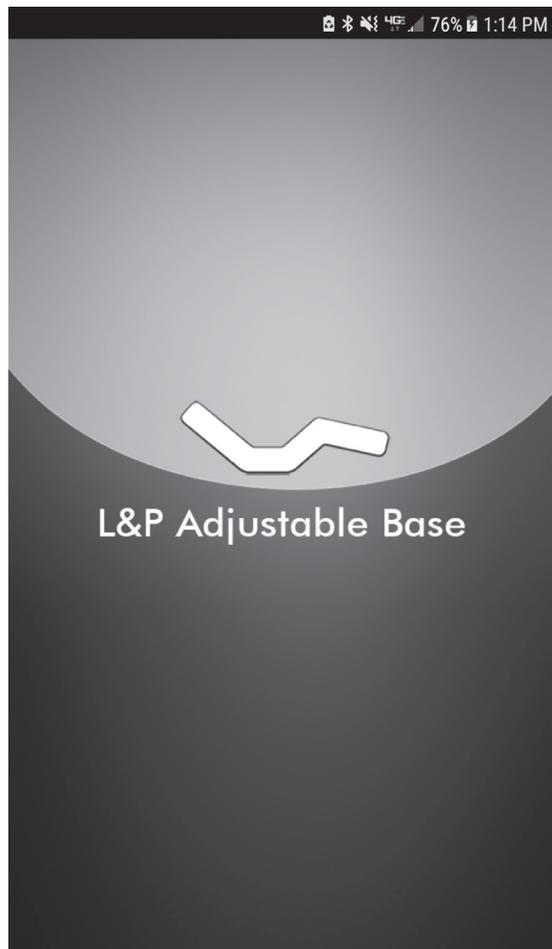


## APPLICATION SETUP

This Adjustable Base can be operated from your personal iOS or Android device through the L&P Adjustable Base app.

*Notes: The remote control must be paired to the base prior to pairing the base with your Bluetooth®-enabled device. See separate Remote Control User Guide.*

### To pair with your Bluetooth®-enabled device:

1. Go to the **App Store** or **Play Store**.
2. Search for the **L&P Adjustable Base** app .
3. Download the app to your personal device.
4. Touch the app to open. The **Select Device** screen opens.
5. Touch the name of your base. *Note: If you have multiple bases in the area, touch the **Plus (+)** icon, and select **Max search device** to show all available bases. However, you can only pair to one base at a time.*

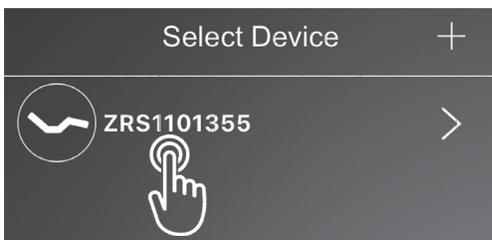

6. A screen opens showing images of multiple remote controls. Touch the remote control image that goes with your base.



7. The device connects and goes to the Control Center screen. *Note: Once the app is connected, the remote control will no longer function until the app is CLOSED.*
8. To return to the home screen, touch the  back arrow.

## CONTROL CENTER SCREEN (Pillow)

**Underbed Light** - Touch to turn on/off underbed light feature.

**Flashlight** - Touch and hold to turn flashlight on. Release to turn flashlight off. Note: Flashlight feature only works on phones with a camera flash.

**Flat** – Touch to lower the base to the level position.

**Head Up** – Touch and hold to raise the head section.

**Head Down** – Touch and hold to lower the head section.

**Pillow Tilt Up** – Touch and hold to raise the pillow tilt section.

**Pillow Tilt Down** – Touch and hold to lower the pillow tilt section.

**Foot Up** – Touch and hold to raise the foot section.

**Foot Down** – Touch and hold to lower the foot section.

**Snore** – Touch to adjust to the factory default Snore position. To reprogram button, adjust base to desired position, then touch and hold the *Snore button* until the control box beeps.

**Memory** – Touch to adjust to the factory default Memory position. To reprogram button, adjust base to desired position, then touch and hold the *Memory button* until the control box beeps.

**ZG** – Touch to adjust to the factory default ZG position. To reprogram button, adjust base to desired position, then touch and hold the *ZG button* until the control box beeps.

**Head Massage Increase (+)** (left side of Control Center screen) – Touch to turn on head massage. Touch again to increase massage intensity. Massage turns off automatically after 30 minutes.

**Head Massage Decrease (-)** (left side of Control Center screen) – After massage is turned on, touch to decrease massage intensity. When massage is at its lowest intensity, touch again to turn massage off.

**Factory Reset** – Touch to reset Snore, Memory, and ZG positions back to the default factory positions.

**Wave** - After massage is turned on, touch to turn massage on in wave mode. Touch again to cycle through wave speeds.

**Foot Massage Increase (+)** (right side of Control Center screen) – Touch to turn on foot massage. Touch again to increase massage intensity. Massage turns off automatically after 30 minutes.

**Foot Massage Decrease (-)** (right side of Control Center screen) – After massage is turned on, touch to decrease massage intensity. When massage is at its lowest intensity, touch again to turn massage off.



## CONTROL CENTER SCREEN (Tilt)

**Underbed Light** - Touch to turn on/off underbed light feature.

**Flashlight** - Touch and hold to turn flashlight on. Release to turn flashlight off. Note: Flashlight feature only works on phones with a camera flash.

**Flat** – Touch to lower the base to the level position.

**Head Up** – Touch and hold to raise the head section.

**Head Down** – Touch and hold to lower the head section.

**Tilt Up** – Touch and hold to raise the base to an incline position.

**Tilt Down** – Touch and hold to lower the base from an incline position.

**Foot Up** – Touch and hold to raise the foot section.

**Foot Down** – Touch and hold to lower the foot section.

**Snore** – Touch to adjust to the factory default Snore position. To reprogram button, adjust base to desired position, then touch and hold the *Snore button* until the control box beeps.

**Memory** – Touch to adjust to the factory default Memory position. To reprogram button, adjust base to desired position, then touch and hold the *Memory button* until the control box beeps.

**ZG** – Touch to adjust to the factory default ZG position. To reprogram button, adjust base to desired position, then touch and hold the *ZG button* until the control box beeps.

**Head Massage Increase (+)** (left side of Control Center screen) – Touch to turn on head massage. Touch again to increase massage intensity. Massage turns off automatically after 30 minutes.


**Head Massage Decrease (-)** (left side of Control Center screen) – After massage is turned on, touch to decrease massage intensity. When massage is at its lowest intensity, touch again to turn massage off.

**Factory Reset** – Touch to reset Snore, Memory, and ZG positions back to the default factory positions.

**Wave** - After massage is turned on, touch to turn massage on in wave mode. Touch again to cycle through wave speeds.

**Foot Massage Increase (+)** (right side of Control Center screen) – Touch to turn on foot massage. Touch again to increase massage intensity. Massage turns off automatically after 30 minutes.

**Foot Massage Decrease (-)** (right side of Control Center screen) – After massage is turned on, touch to decrease massage intensity. When massage is at its lowest intensity, touch again to turn massage off.

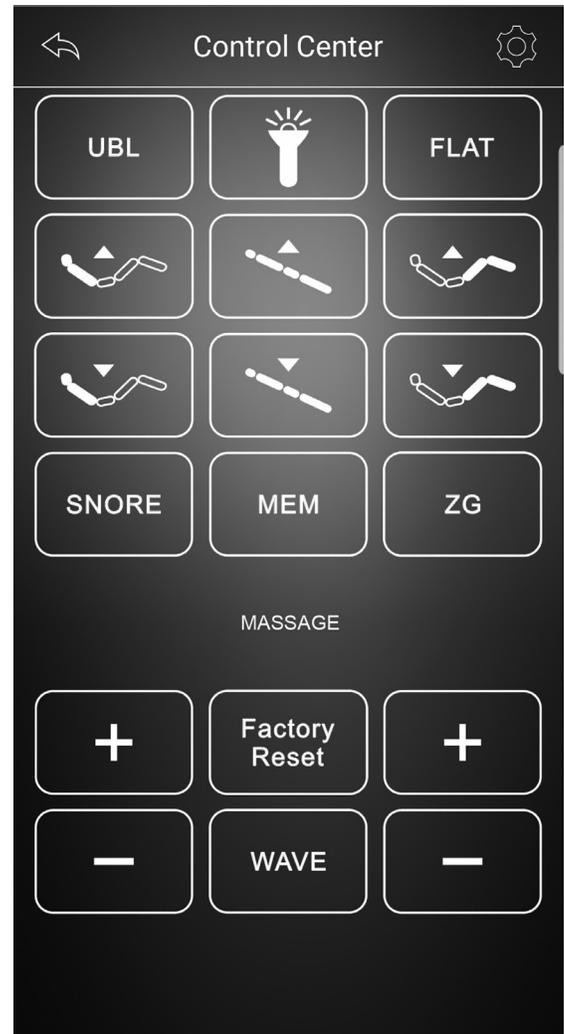

## CONTROL CENTER SCREEN (Pillow & Lumbar)

**Underbed Light** - Touch to turn on/off underbed light feature.

**Flashlight** - Touch and hold to turn flashlight on. Release to turn flashlight off. Note: Flashlight feature only works on phones with a camera flash.

**Flat** – Touch to lower the base to the level position.

**Head Up** – Touch and hold to raise the head section.

**Head Down** – Touch and hold to lower the head section.

**Pillow Tilt Up** – Touch and hold to raise the pillow tilt section.

**Pillow Tilt Down** – Touch and hold to lower the pillow tilt section.

**Foot Up** – Touch and hold to raise the foot section.

**Foot Down** – Touch and hold to lower the foot section.

**Lumbar Up** – Touch and hold to raise the lumbar section.

**Lumbar Down** – Touch and hold to lower the lumbar section.

**ZG** – Touch to adjust to the factory default ZG position. To reprogram button, adjust base to desired position, then touch and hold the *ZG button* until the control box beeps.

**Snore** – Touch to adjust to the factory default Snore position. To reprogram button, adjust base to desired position, then touch and hold the *Snore button* until the control box beeps.

**M1** – Touch to adjust to the factory default M1 position. To reprogram button, adjust base to desired position, then touch and hold the *M1 button* until the control box beeps.

**M2** – Touch to adjust to the factory default M2 position. To reprogram button, adjust base to desired position, then touch and hold the *M2 button* until the control box beeps.

**Head Massage Increase (+)** – Touch to turn on head massage. Touch again to increase massage intensity. Massage turns off automatically after 30 minutes.


**Head Massage Decrease (-)** – After massage is turned on, touch to decrease massage intensity. When massage is at its lowest intensity, touch again to turn massage off.

**Factory Reset** – Touch to reset ZG, Snore, M1, and M2 positions back to the default factory positions.

**Wave** - After massage is turned on, touch to turn massage on in wave mode. Touch again to cycle through wave speeds.

**Foot Massage Increase (+)** – Touch to turn on foot massage. Touch again to increase massage intensity. Massage turns off automatically after 30 minutes.

**Foot Massage Decrease (-)** – After massage is turned on, touch to decrease massage intensity. When massage is at its lowest intensity, touch again to turn massage off.

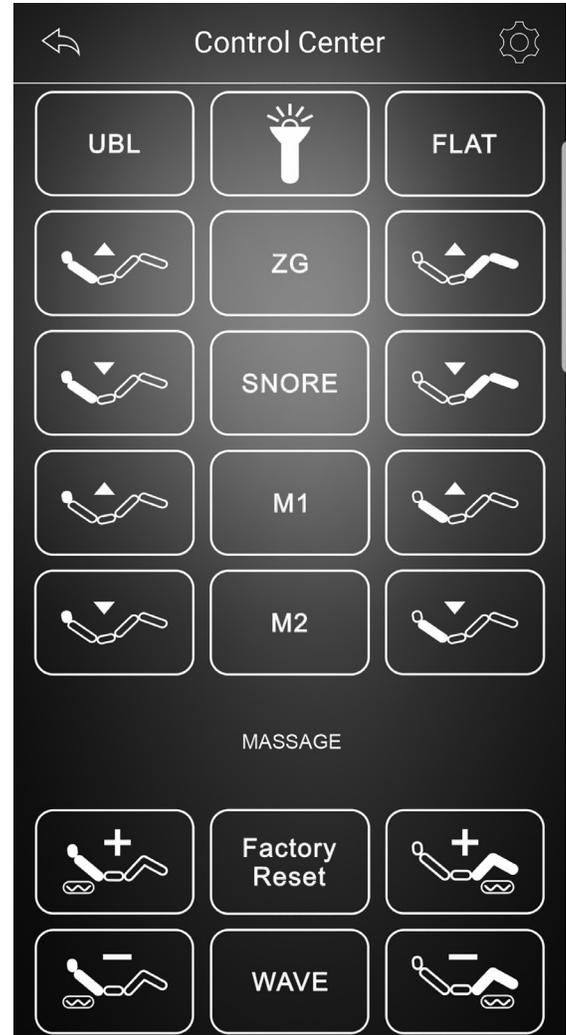

## SETTING SCREEN

Tap the **Settings** icon located at the top of the screen .

**CHANGE NAME** – Give your base a personalized name.

1. Tap within the name of the base. The keypad opens.
2. Delete current name.
3. Type in the new name.
4. Tap **Save**.


**CHANGE PICTURE** – Give your base a personalized picture.

1. Tap the picture icon.
2. Select either:  
**Camera** (to take a new picture) or  
**Gallery** (to use an existing picture).  
Tap **Cancel** before saving to abort changes.
3. Complete action.
4. Tap **Save**.

**RESTORE DEFAULT** – Tap to restore name and picture to original settings.



↑  
TOUCH  
FEATURE  
LOCATED  
AT TOP OF  
SCREEN

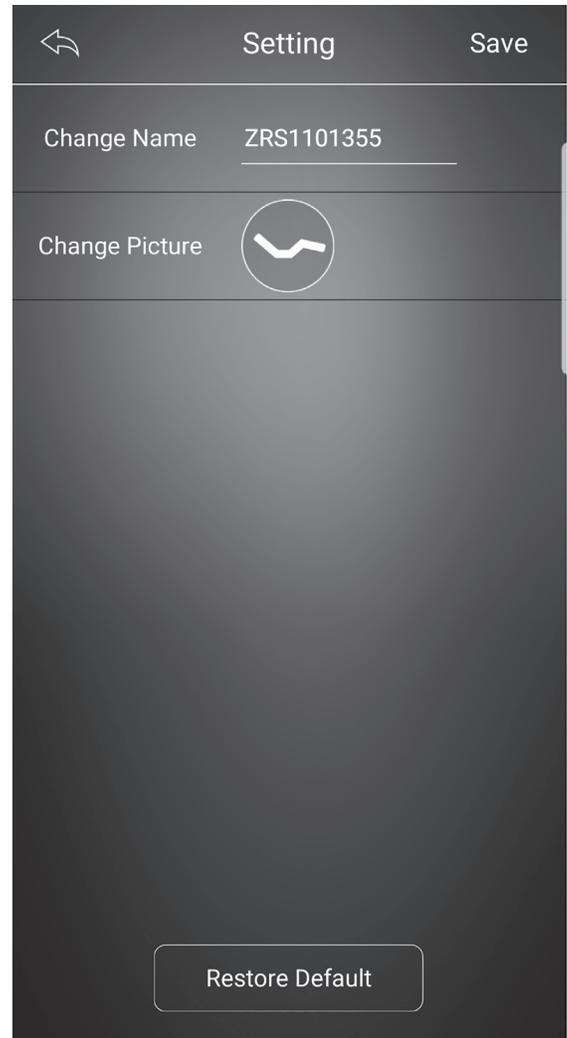

**CUSTOMER SERVICE** toll free: **(800) 888-3078**

© 2019 Leggett & Platt, Inc. Consumer Products